


## MODEL 7926 IONIZER CONNECTOR CONVERSION KIT

**Tools Required:** Wire cutters, wire strippers, knife, 5/64 hex wrench and heat gun.

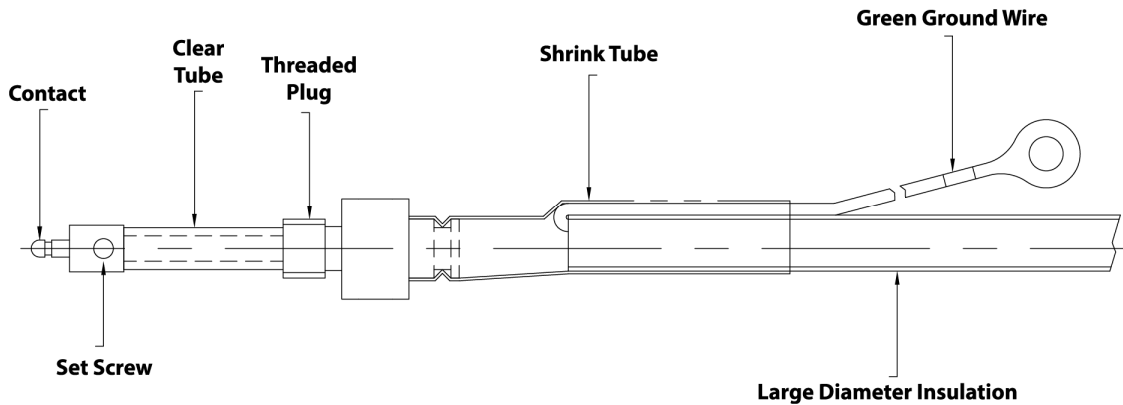

1. With wire cutters, remove additional large diameter insulation. (Black wire should extend approximately 3.5" past the large diameter insulation.)
2. Bend green ground wire against the large diameter insulation (shown above).
3. Strip 3/8" of insulation from black wire. Insert threaded plug and clear tube over the black wire.
4. Insert stripped wire into the contact. Attach the contact by turning set screw clockwise. **Do not over tighten.**
5. Slide shrink tube over the grooved end of the threaded plug. Shrink the tube with a heat gun. **Caution! Too much heat can damage the conductor.**

If you have any questions or problems, please contact an EXAIR Application Engineer at:

Toll Free: 1-800-903-9247 (U.S. & Canada)

Telephone: 513 671-3322 outside of U.S. & Canada

Toll Free Fax: 866-329-3924 (U.S. & Canada)

FAX: 513 671-3363 outside of U.S. & Canada

E-mail: techhelp@exair.com

Website: www.exair.com